

# OpenROV Controller 2.8

## Digital I/O Channels (Arduino Addresses)

0	BB UART	28	User J3-4
1	BB UART	29	User J3-2
2	User J3-11	30	User J2-16
3	User J3-9	31	User J2-14
4	User J3-7	32	User J2-12
5	User J3-5	33	User J2-10
6	Servo1 J20-1	34	User J2-8
7	Servo2 J20-4	35	User J2-6
8	Servo3 J20-7	36	User J2-4
9	Servo4 J21-1	37	User J2-2
10	Servo5 J21-4	38	N/C
11	Servo6 J21-7	39	N/C
12	PWM4 J1-7/8	40	N/C
13	LED	41	N/C
14	User J2-11	42	N/C
15	User J2-9	43	N/C
16	ESC Power Switch	44	PWM1 J1-1/2
17	N/C	45	PWM2 J1-3/4
18	User J2-7	46	PWM3 J1-5/6
19	User J2-5	47	N/C
20	I2C SDA J1-14	48	3.3V ENABLE
21	I2C SCL J1-12	49	LED
22	User J3-16	50	SPI MISO to BB and ICSP Header
23	User J3-14	51	SPI MOSI to BB and ICSP Header
24	User J3-12	52	SPI SCK to BB and ICSP Header
25	User J3-10	53	SPI SS to BB
26	User J3-8		
27	User J3-6		

## Analog I/O Channels (Arduino Addresses)

0	Current for non-ESC loads (BB, Controller, etc)
1	ESC 3 Current
2	ESC 2 Current
3	ESC 1 Current
4	Battery Voltage (after protection diodes)
5	Battery 2 Current
6	Battery 1 Current
7	Humidity (optionally populated)
8	Board Temperature
9	User J4-14
10	User J4-12
11	User J4-10
12	User J4-8
13	User J4-6
14	User J4-4
15	User J4-2

## Revision History

Rev	Date	Engr	Changes
2.5	13 Aug 2013	RWH	Initial Prototype
2.5 Rev A	20 Aug 2013	RWH	Prototype Batch. Revised J6 connector orientation. Changed BB node names. Revised C11, C15, and U5 and added C34 to avoid +5V and +3.3V brownout when switching ESCs on. Revised ESC mounting holes. Revised LED colors. Revised silkscreen. Added weak Arduino reset pullup for standalone operation. Added cap slot C35 to hold vehicle on if noisy tether connection. Added bypass points J17 for ESC power switch. Arduino reset function moved from BB pin 13 to BB pin 11.
2.5 Rev B	2 Sep 2013	RWH	First production batch. J6 changed from socket to male board stacker. 4th mounting hole added to board. Revised fiducial locations. Inverted logical case of UART LEDs. BB TX LED moved from Arduino space to BB space. Board ID EEPROM circuitry DNP.
2.6	12 Nov 2013	RWH	Layout changes to accept V2.0 Tenda/MediaLink Homeplug adapter. Additional sockets added to accept V2.0 pin configuration. LEDs added to display Homeplug adapter status. Board ID circuitry modified. Servo output connector split into two. Filters added to ESC current monitors. Test points updated. Silkscreen updated.
2.7	18 Aug 2014	RWH	Revised ESC mounting pads to fit Afro 12A and 20A ESCs. New +5V switching power supply with 3A output vs. 1.6A on Controller 2.6. Resized programming resistors on power PWM outputs to handle 2A output vs. 1A. Heavier traces on TP20-TP25. Revised ROV and ESC power switching. Additional +3.3V supply added to isolate homeplug adapter from +3.3V instrumentation
2.8	27 May 2015	RWH	Board shortened 5mm. DB-25 Connector J5 changed to right-angle as default. Humidity sensor SENS1 mount pad isolated from ground. Enable added to 3.3V supply for I2C and PWM outputs (D48). EEPROM U8 is now read-only; ground Test Pad TP1 to allow writes. Filters added to current monitors for batteries and non-ESC loads. Corner frequency of current monitor filters lowered to 50 Hz. PWM3 and Servo4 routed to DB25 connector for external lights and servo. Aux power input J11 moved to board periphery. Circuitry added to detect imminent power failure and interrupt/shut down BeagleBone, via BB pin P9-23.

## Sheet Finder

1	Cover Page
2	Input / Output
3	Power Switching
4	5V and 3.3V Power
5	Microcontroller (Arduino Mega compatible)
6	PWM Power Outputs and Environment Sensors
7	I2C and BeagleBone Interface
8	Motor Current Sensing and ESC Connections

## OpenROV

This work is released under the Creative Commons Attribution-NonCommercial-Share Alike 3.0 Unported License. All derivative works are to be attributed to OpenROV

## Cover Page

TITLE: OpenROV Controller 2.8

Document Number:

REV:  
-

Date: 5/27/2015 12:37:55 PM

Sheet: 1/8

A

B

C

D

E

F

A

B


C

D

E

F

### Wire Harness Connector

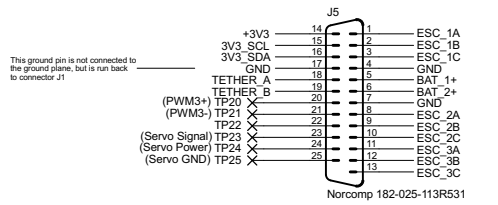


This ground pin is not connected to the ground plane, but is run back to connector J1


### DB-25 Male Right-Angle Connector

For backwards compatibility with OROV 2.5-2.7, substitute straight connector such as FC1 10090096-P254


### BeagleBone P9 Connector

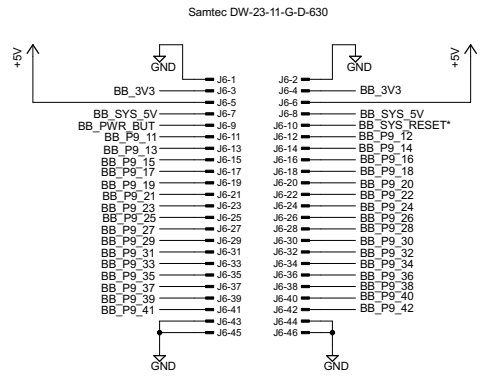


### Servo Outputs

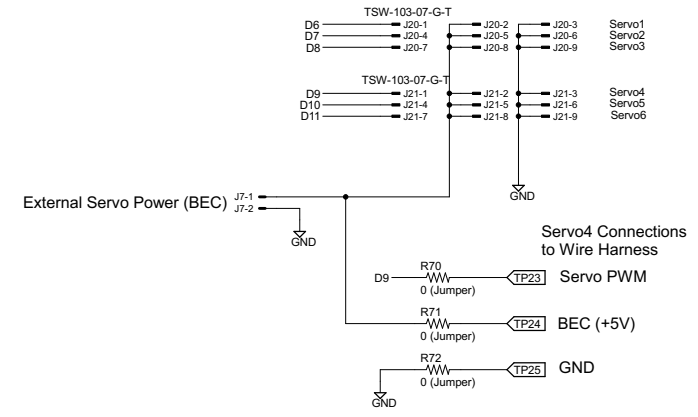


### Header Sockets

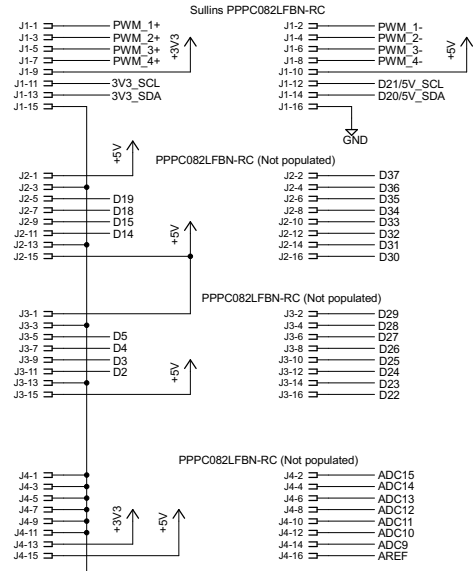

### Homeplug Adapter Connectors

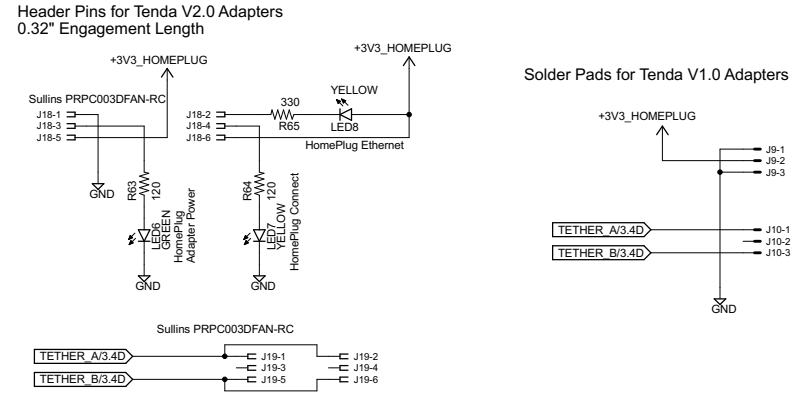

### Ground Points



### Alignment Fiducials





## OpenROV

This work is released under the Creative Commons Attribution-NonCommercial-Share Alike 3.0 Unported License. All derivative works are to be attributed to OpenROV

### Input / Output

TITLE: OpenROV Controller 2.8	
Document Number:	REV: -
Date: 5/27/2015 12:37:55 PM	Sheet: 2/8

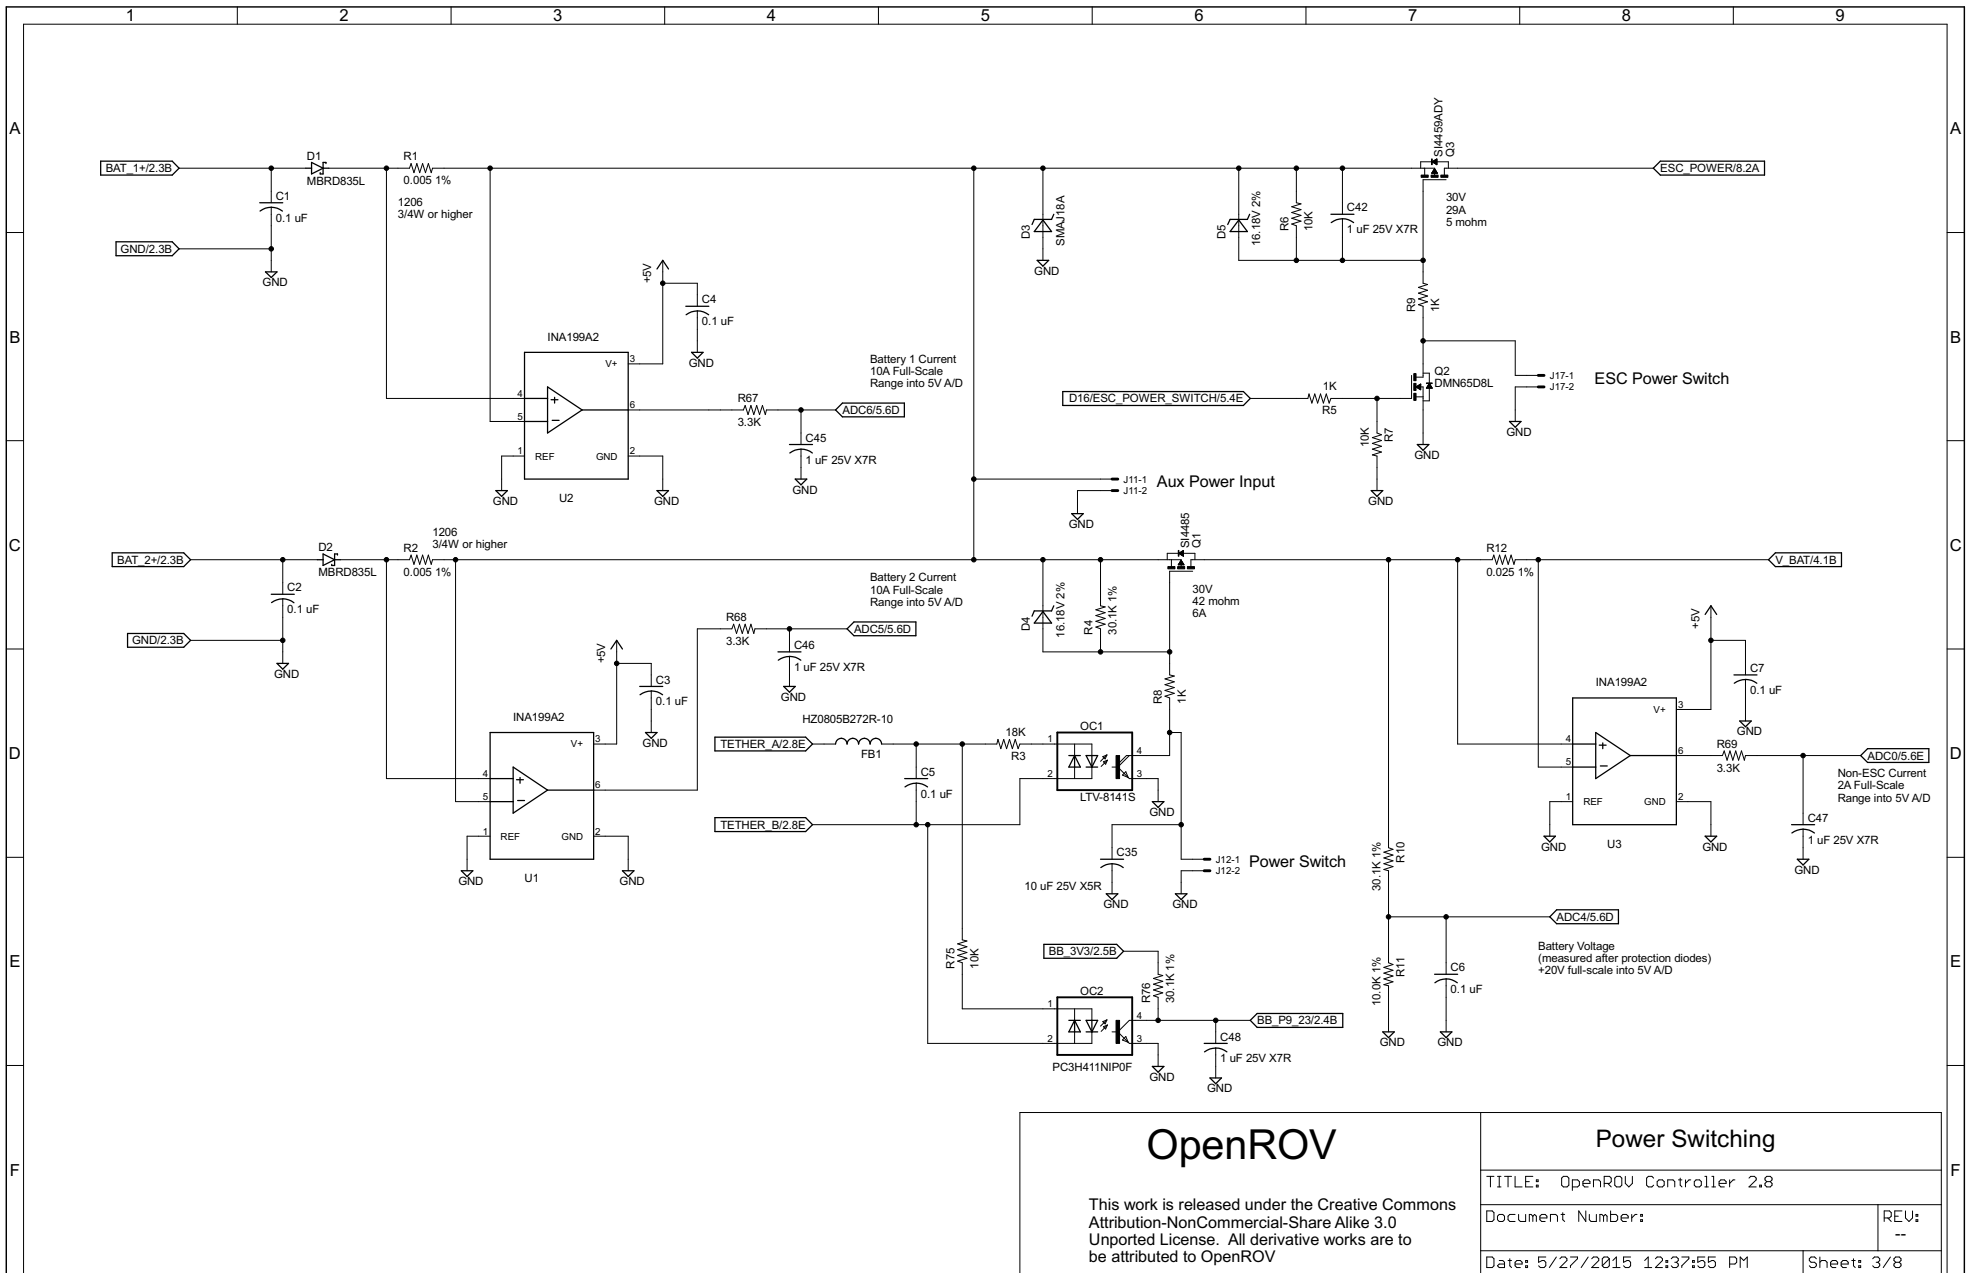

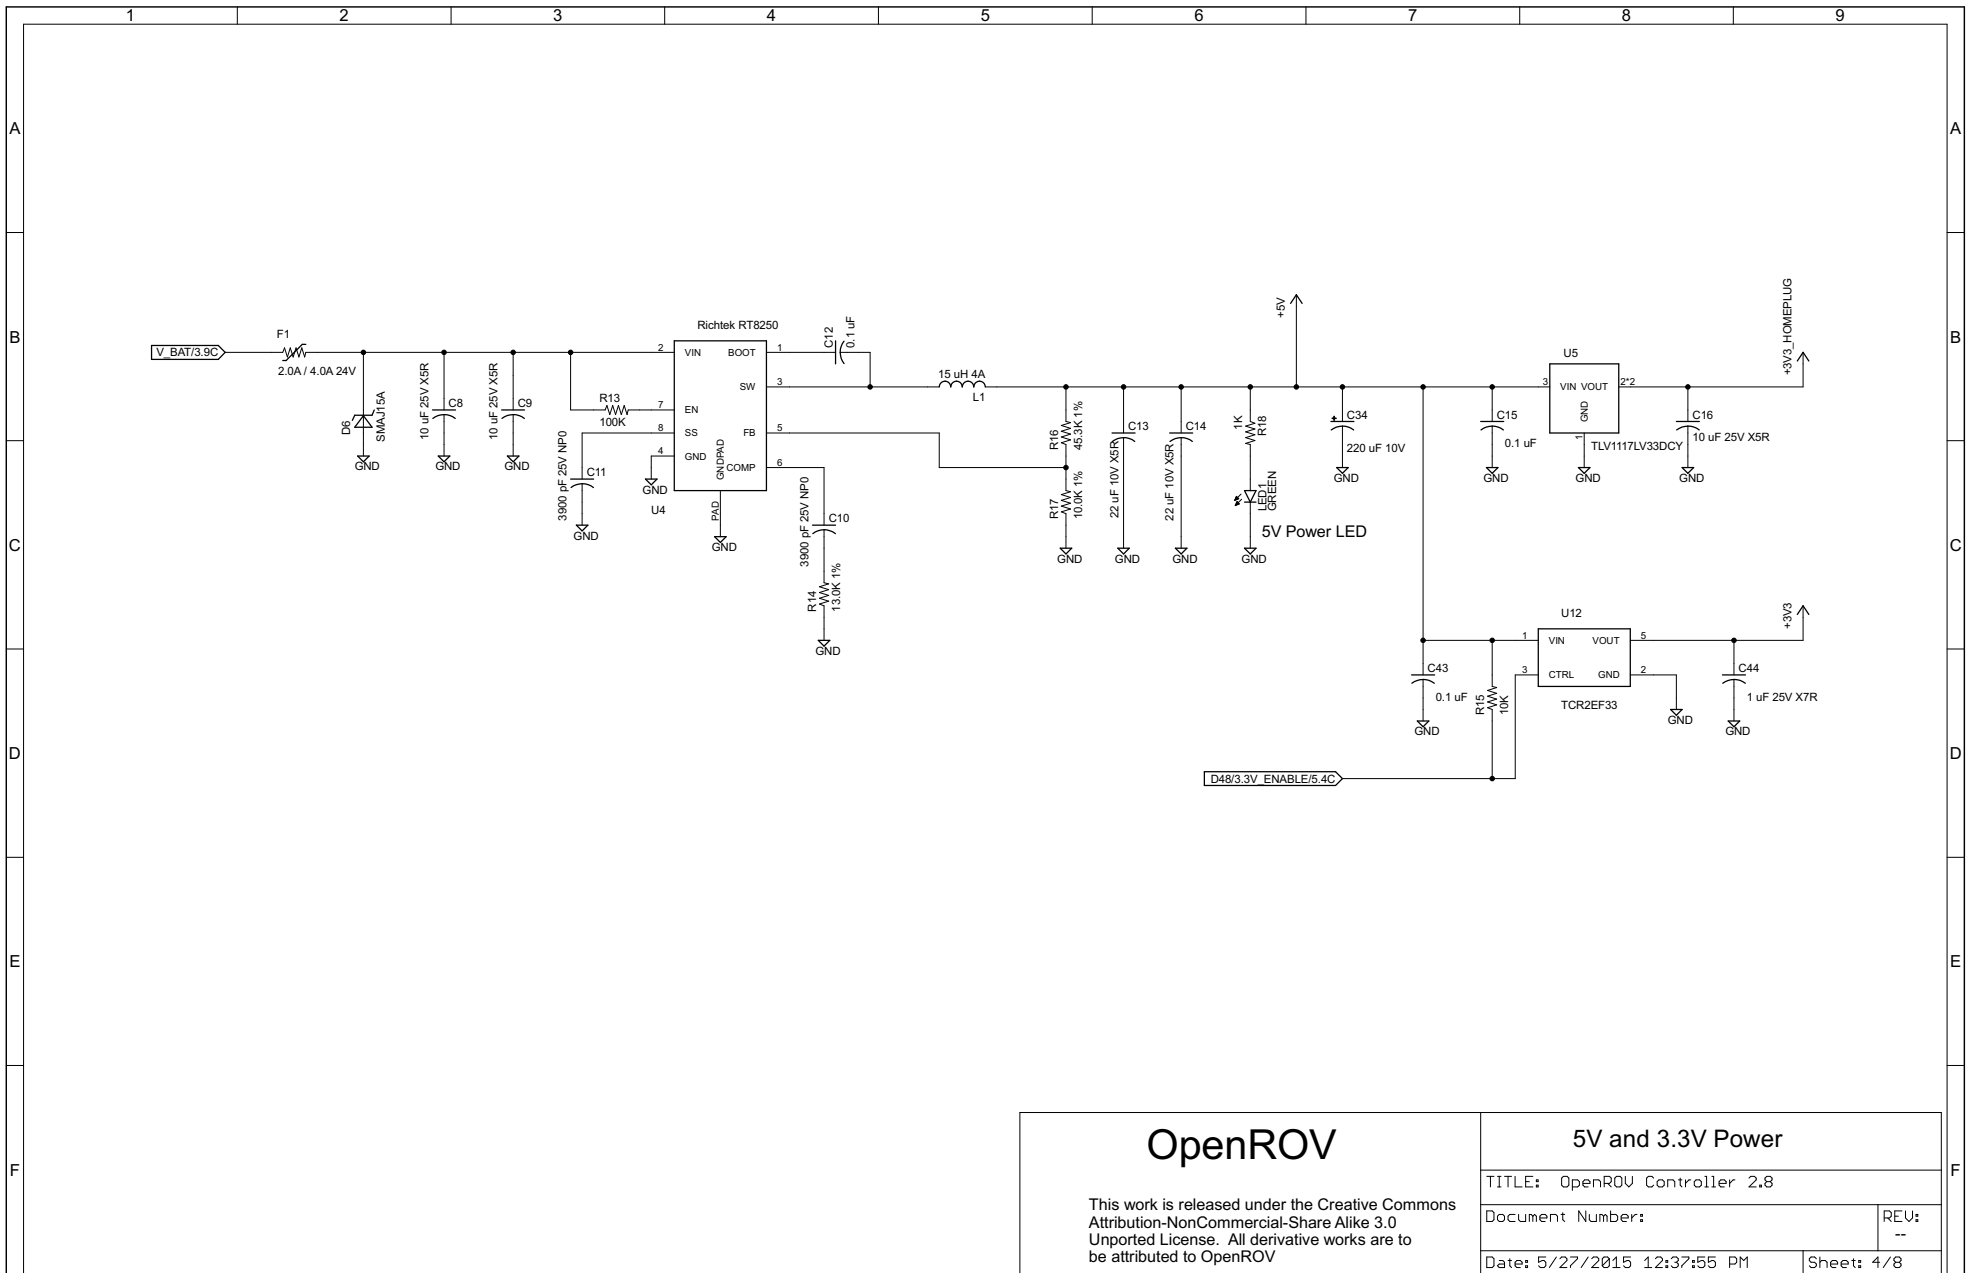

# OpenROV

This work is released under the Creative Commons Attribution-NonCommercial-Share Alike 3.0 Unported License. All derivative works are to be attributed to OpenROV

## 5V and 3.3V Power


TITLE: OpenROV Controller 2.8

Document Number:

REV:  
--

Date: 5/27/2015 12:37:55 PM

Sheet: 4/8

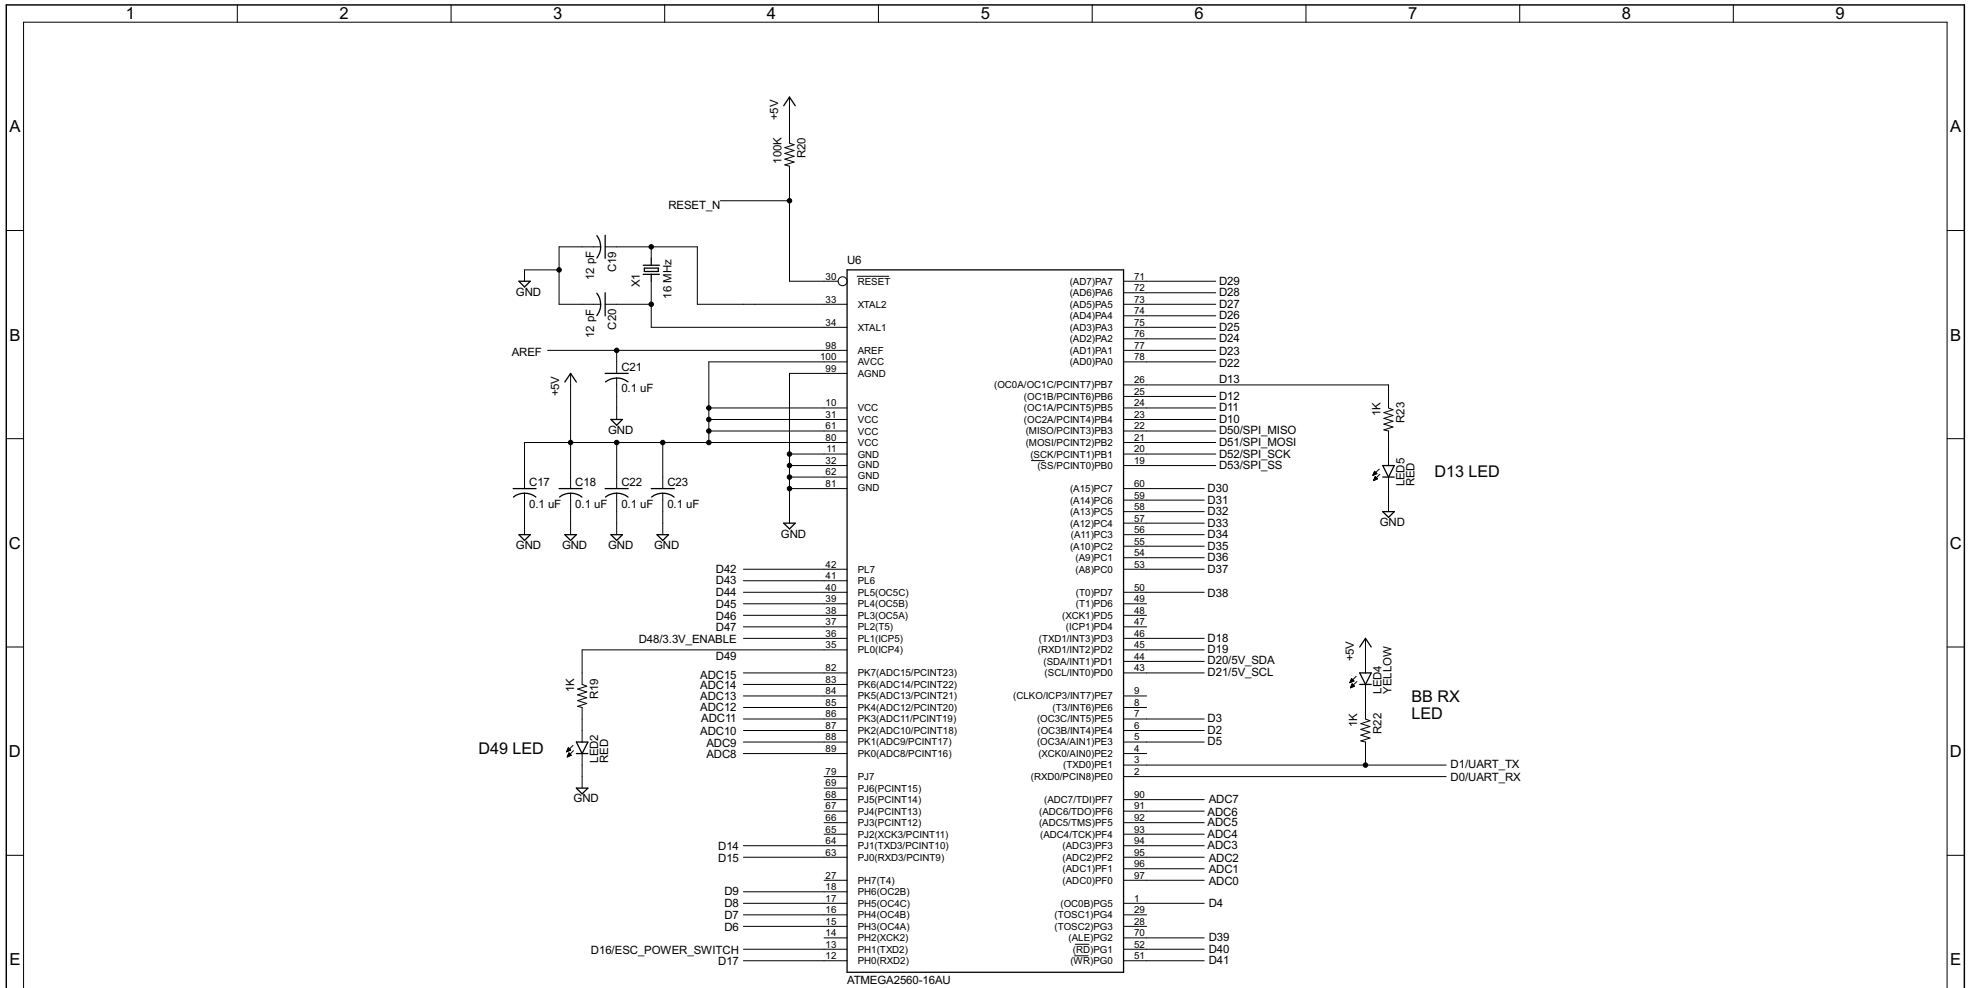

Adapted from Arduino Mega 2560 R3

## OpenROV

This work is released under the Creative Commons Attribution-NonCommercial-Share Alike 3.0 Unported License. All derivative works are to be attributed to OpenROV

## Microcontroller

TITLE: OpenROV Controller 2.8

Document Number:

REV:  
--

Date: 5/27/2015 12:37:55 PM

Sheet: 5/8




## PWM Outputs

Populate one jumper only for each PWM channel.


Select from maximum output of 3.3V, 5V, or battery voltage

Default configuration is Battery Voltage on Channel 1 (Internal LED Board), 5V on Channel 2 (Scaling Lasers), and Battery Voltage on Channel 3 (External LEDs)


For Battery outputs, 2.0A maximum current on each PWM channel  
For +5V outputs, maximum total PWM current is 1.5A  
For +3.3V outputs, maximum total PWM current is 0.2A

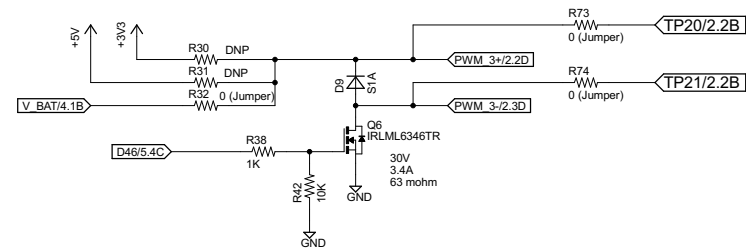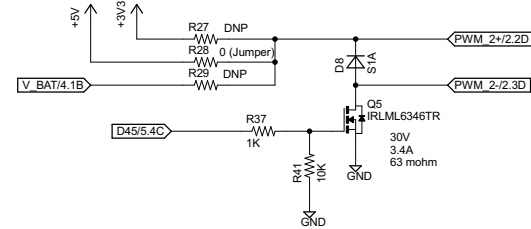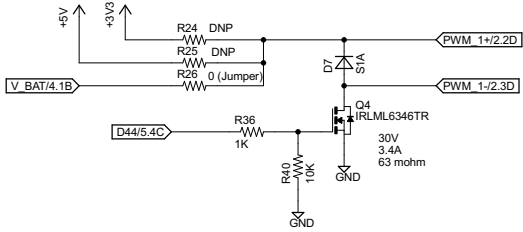


PWM3 Connections to Wire Harness for External LEDs

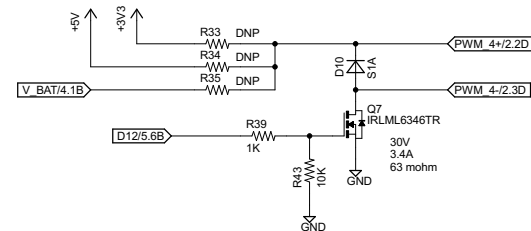

## Humidity Sensor

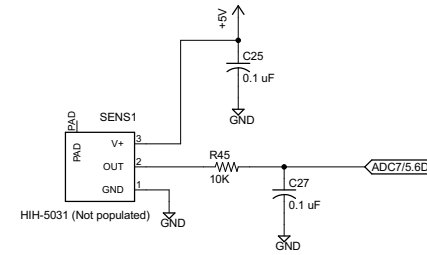

## Temperature Sensor

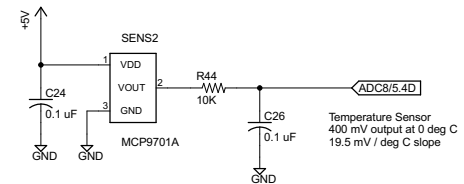

# OpenROV

This work is released under the Creative Commons Attribution-NonCommercial-Share Alike 3.0 Unported License. All derivative works are to be attributed to OpenROV

## PWM and Environment Sensors

TITLE: OpenROV Controller 2.8


Document Number:

REV:  
--


Date: 5/27/2015 12:37:55 PM

Sheet: 6/8

### BeagleBone Interface

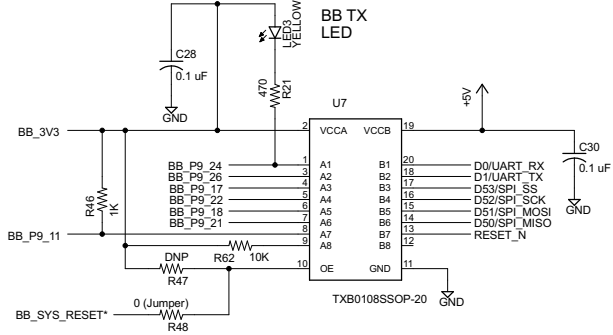


### I2C Interface

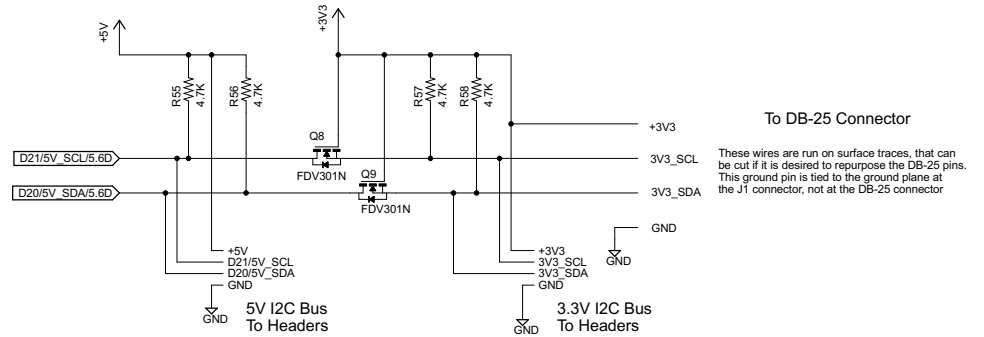


To DB-25 Connector

These wires are run on surface traces, that can be cut if it is desired to repurpose the DB-25 pins. This ground pin is tied to the ground plane at the J1 connector, not at the DB-25 connector

### BeagleBone Cape ID

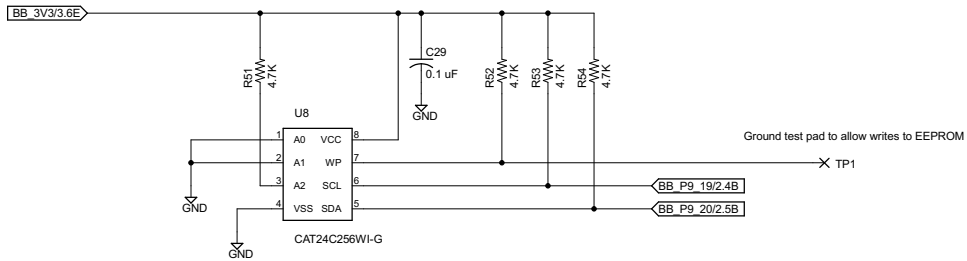

### ICSP Header



## OpenROV

This work is released under the Creative Commons Attribution-NonCommercial-Share Alike 3.0 Unported License. All derivative works are to be attributed to OpenROV

### I2C and BeagleBone Interface


TITLE: OpenROV Controller 2.8

Document Number:

REV: --

Date: 5/27/2015 12:37:55 PM

Sheet: 7/8

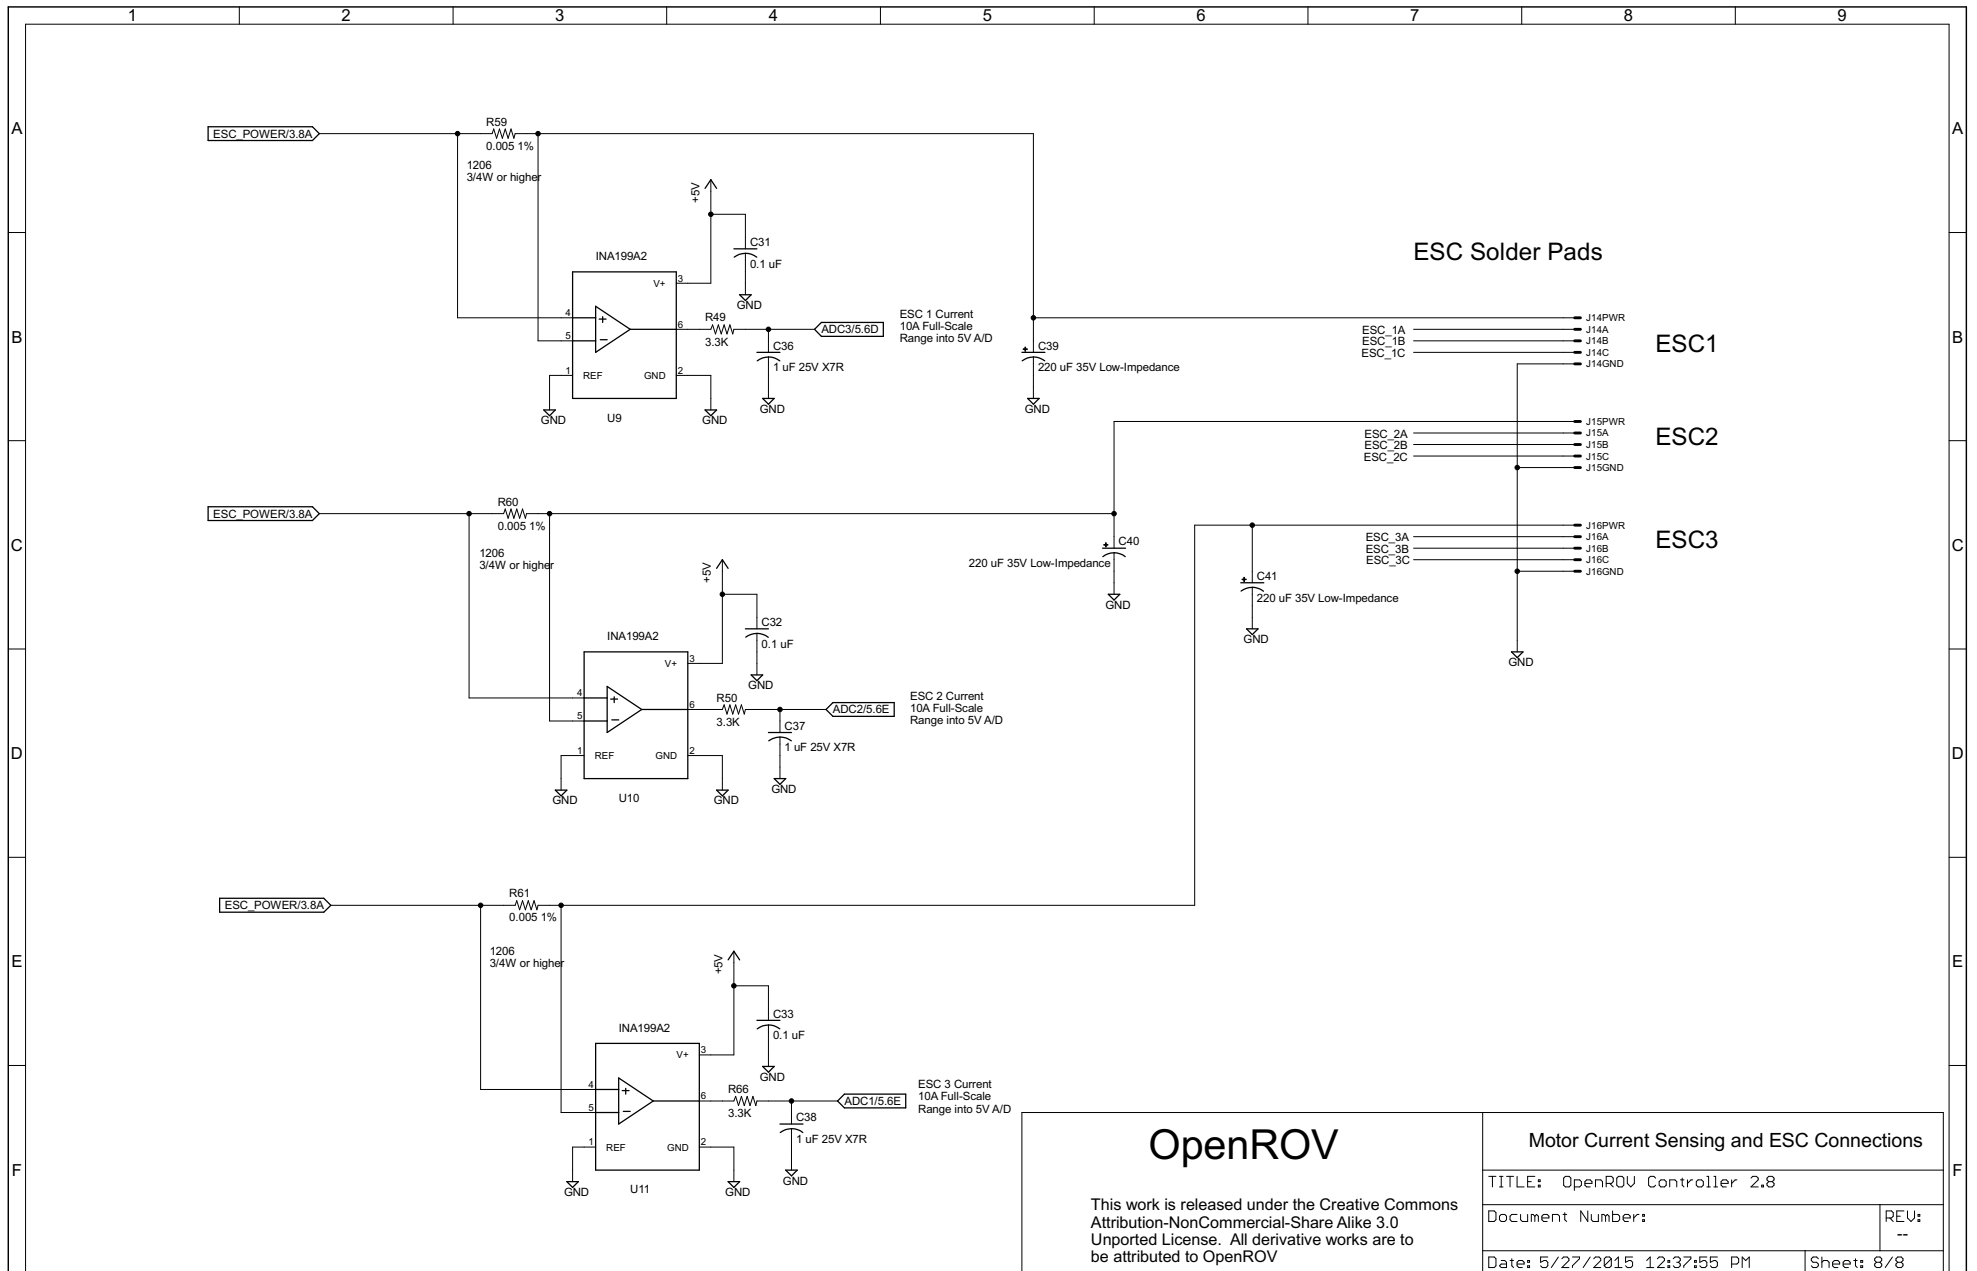

# OpenROV

This work is released under the Creative Commons Attribution-NonCommercial-Share Alike 3.0 Unported License. All derivative works are to be attributed to OpenROV

## Motor Current Sensing and ESC Connections

TITLE: OpenROV Controller 2.8	
Document Number:	REV: --
Date: 5/27/2015 12:37:55 PM	Sheet: 8/8